


Ekorooftile Headwall Flashing Installation Detail

 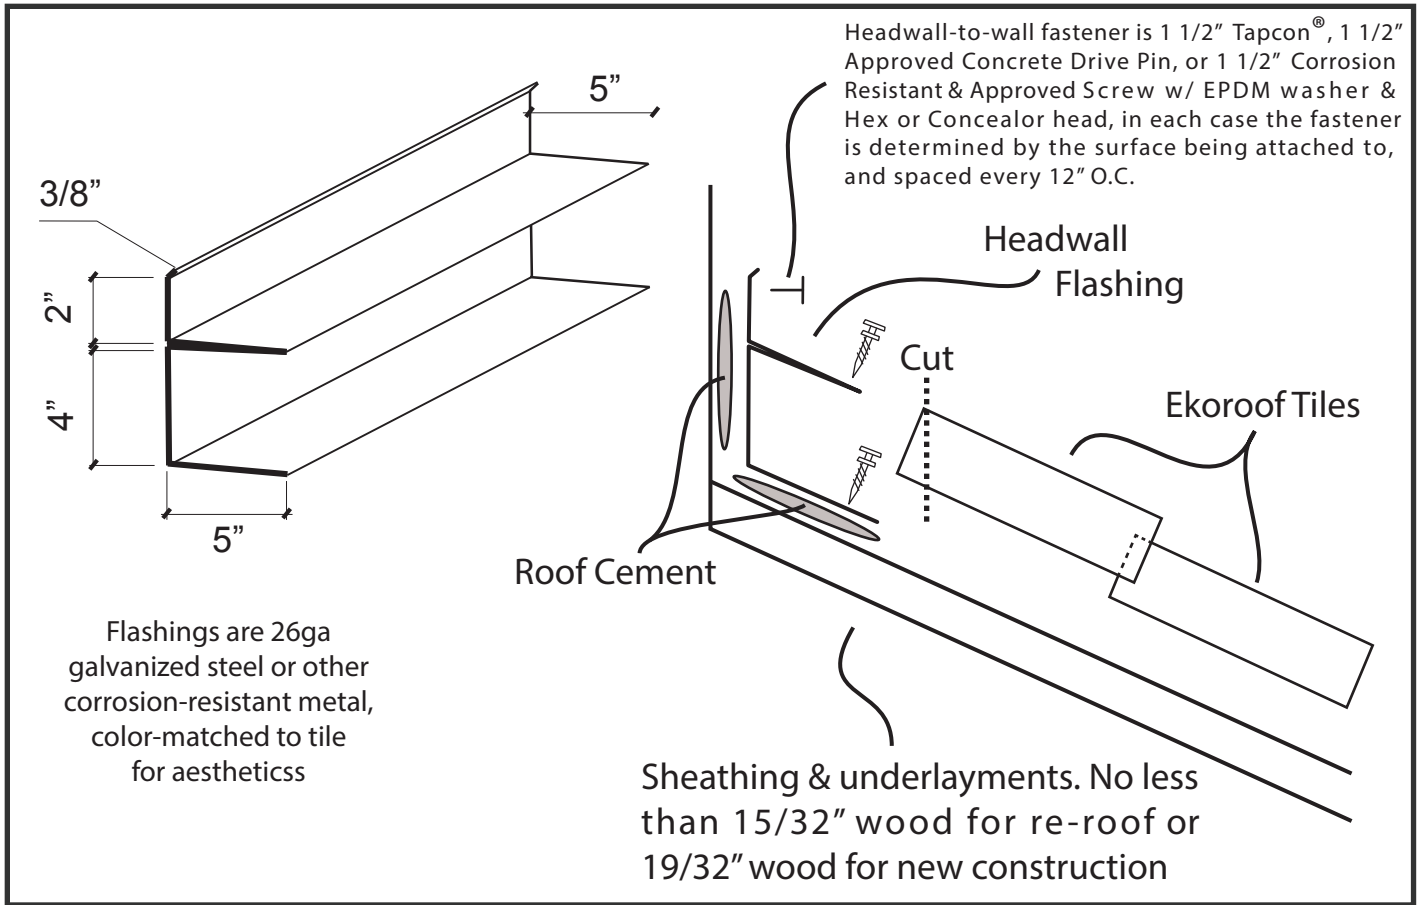


Headwall to Deck Fastener is #10, 1 1/2" wood point, Corrosion Resistant & Approved Screw w/ EPDM washer & Hex or Concealor head, installed every 12" O.C. Headwall to Ekorooftile fastener is same type, but color-matched for aesthetics.



Concealor / Pancake Head



1/4" Hex Drive




Install Headwall Flashing to the wall as specified, then fasten Ekorooftile panels abutting the inner part of the flashing. Seal Ekorooftile tiles to the back end of the headwall with Ekorooftile Sealant, NPC Sealants Solar Seal 900, or equivalent. Ekorooftile tiles may be cut to fit flush against the back end of the flashing. Fasten flashing to high point of Ekorooftile tiles every 20". Additional fasteners may be used at each contact point with tile, if desired.

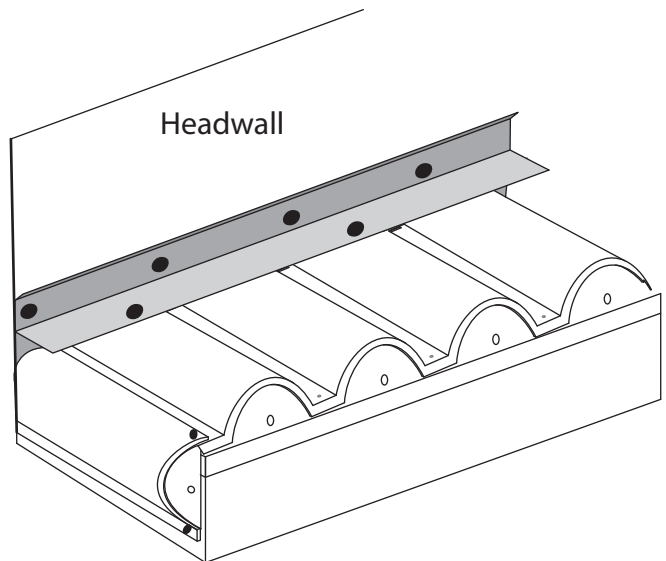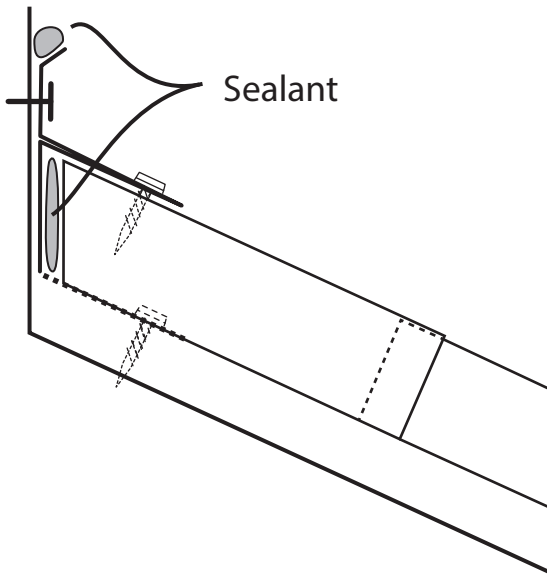

drawings not to scale

Ekorooftile Headwall Flashing Installation Detail

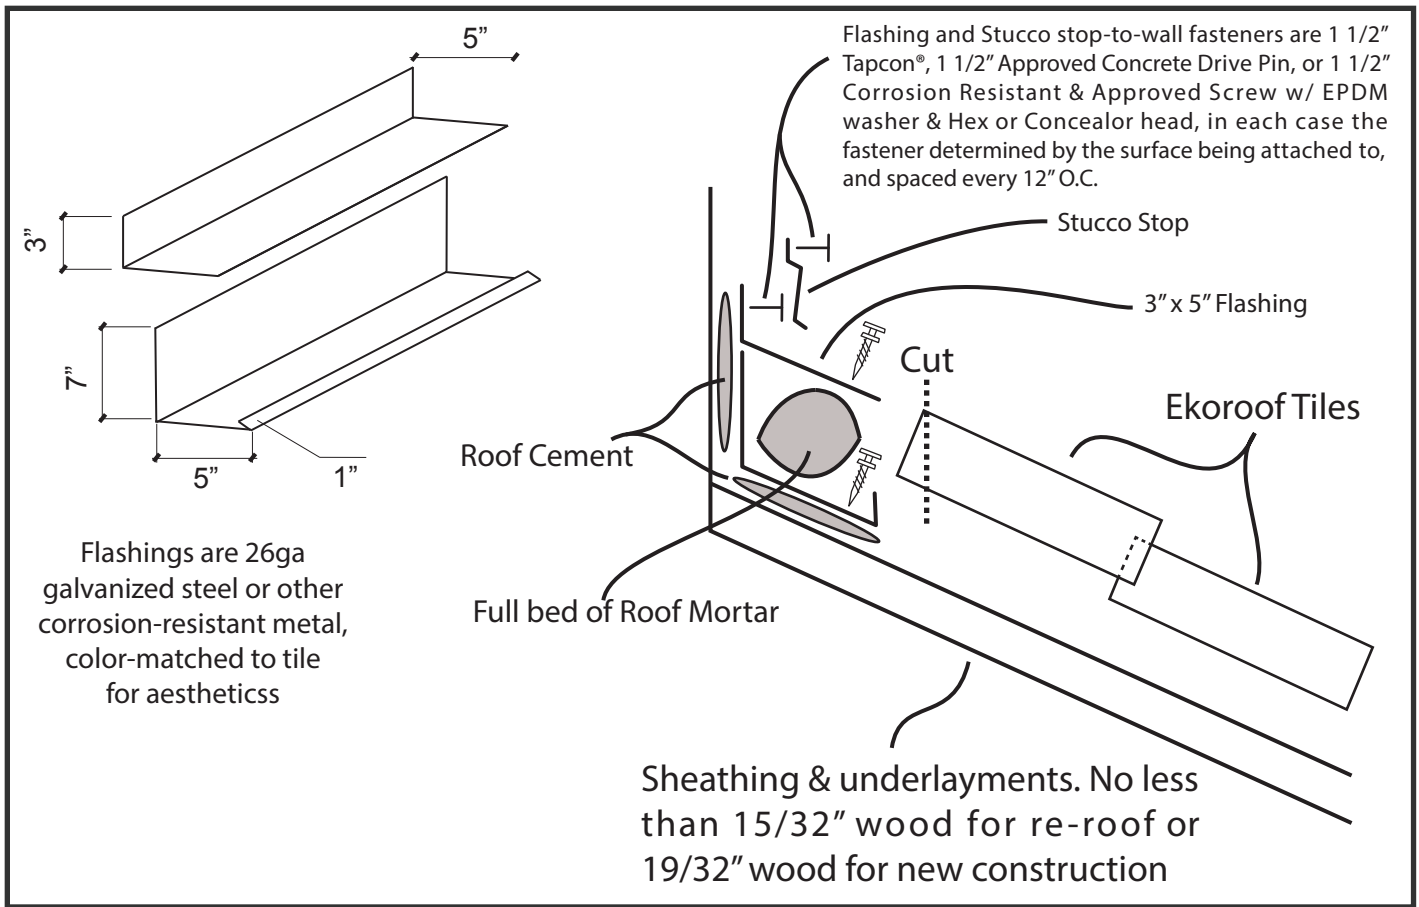


Headwall to Deck Fastener is #10, 1 1/2" wood point, Corrosion Resistant & Approved Screw w/ EPDM washer & Hex or Concealor head, installed every 12" O.C. Headwall to Ekorooftile fastener is same type, but color-matched for aesthetics.



Concealor / Pancake Head



 1/4" Hex Drive




Install Flashings to the wall as specified, then apply a full bed of mortar to the junction of the deck and headwall, over the 5" x 7" flashing, and fasten Ekorooftile panels spaced at least 1/2", but not more than 1" away from the inner part of the flashing to allow the concrete bed to remain continuous. Fasten 5" x 7" flashing to high point of Ekorooftiles every 20". Additional fasteners may be used at each contact point with tile, if desired.

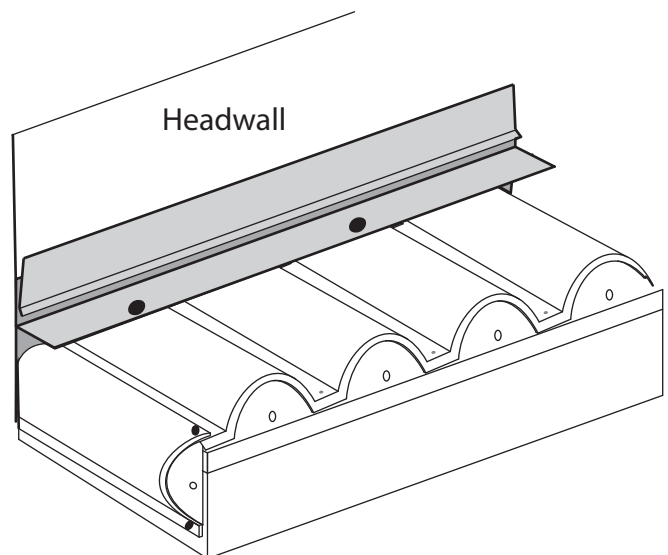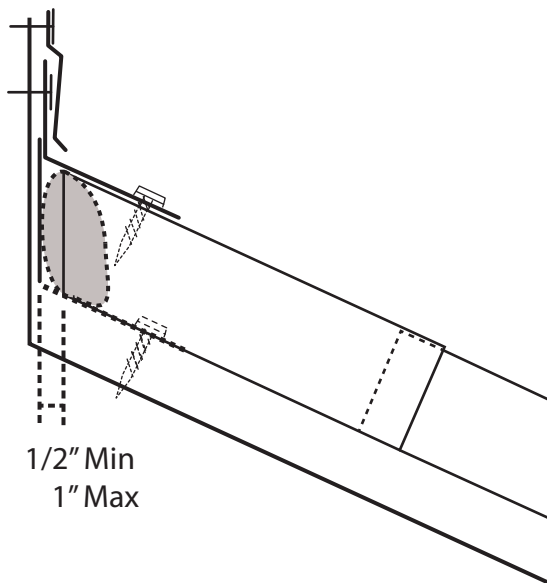


drawings not to scale

Ekorooftile Sidewall Flashing Installation Detail

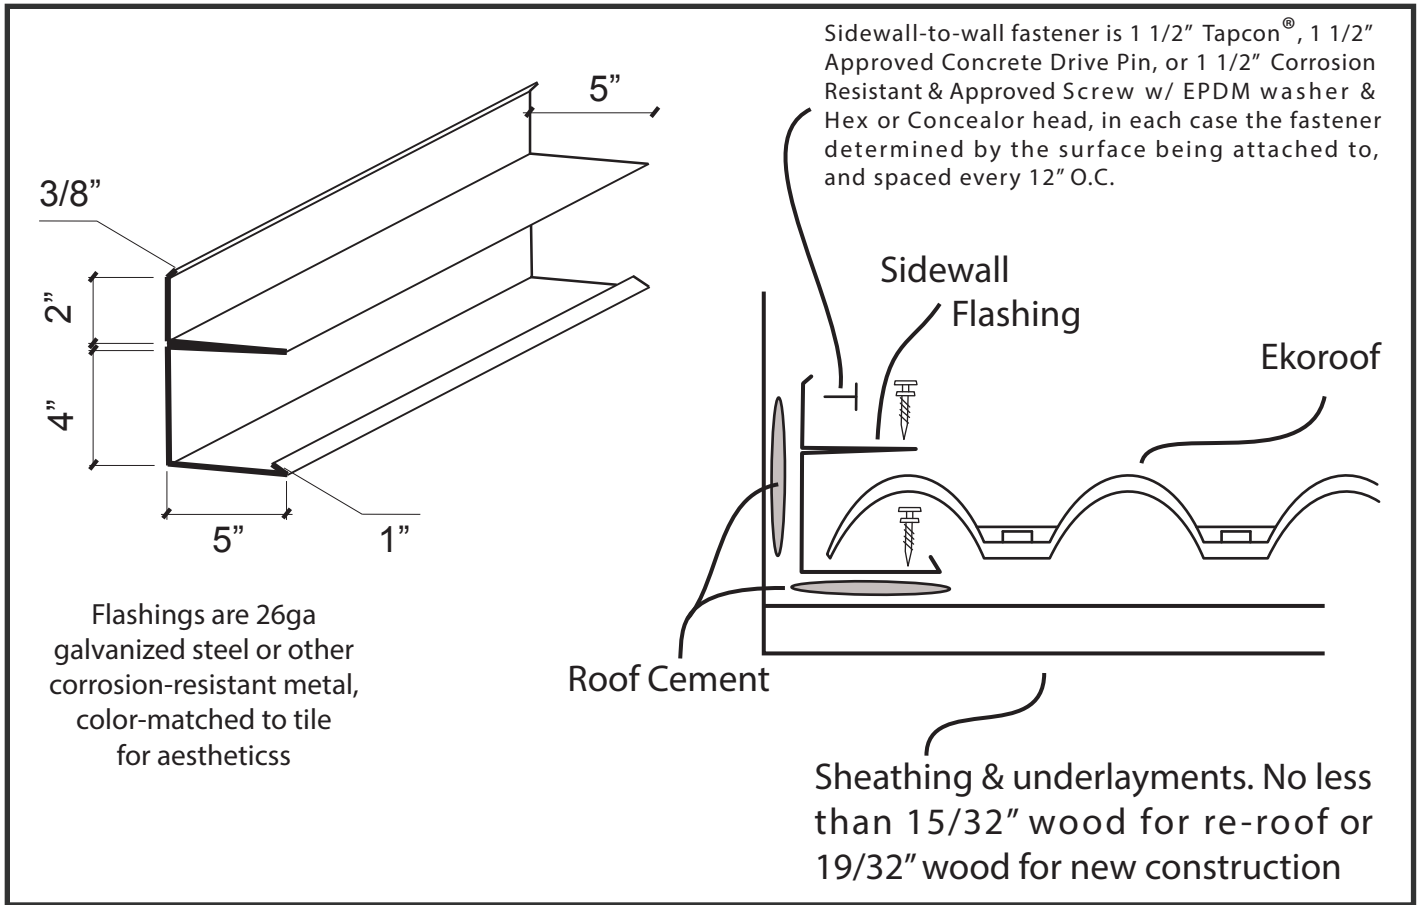


Sidewall to Deck Fastener is #10, 1 1/2" wood point, Corrosion Resistant & Approved Screw w/ EPDM washer & Hex or Concealor head, installed every 12" O.C. Sidewall to Ekorooftile fastener is same type, but color-matched for aesthetics.


 
Concealor / Pancake Head



1/4" Hex Drive

 


Install Sidewall Flashing to the wall as specified, then fasten Ekorooftile LiteTile panels abutting the inner part of the flashing. Ekorooftile tiles may be cut to fit flush against the back end of the flashing. Fasten flashing to high point of Ekorooftile tiles every 20".

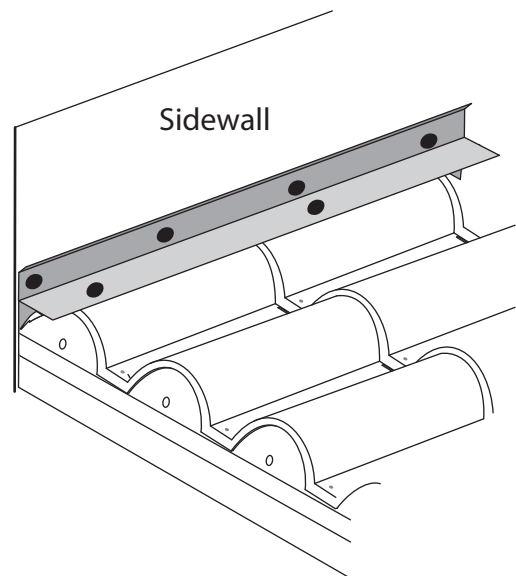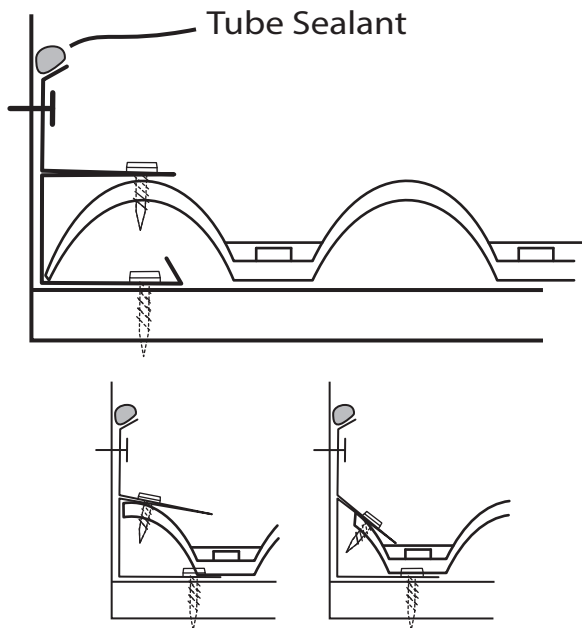


drawings not to scale

Ekorooftile Sidewall Flashing Installation Detail

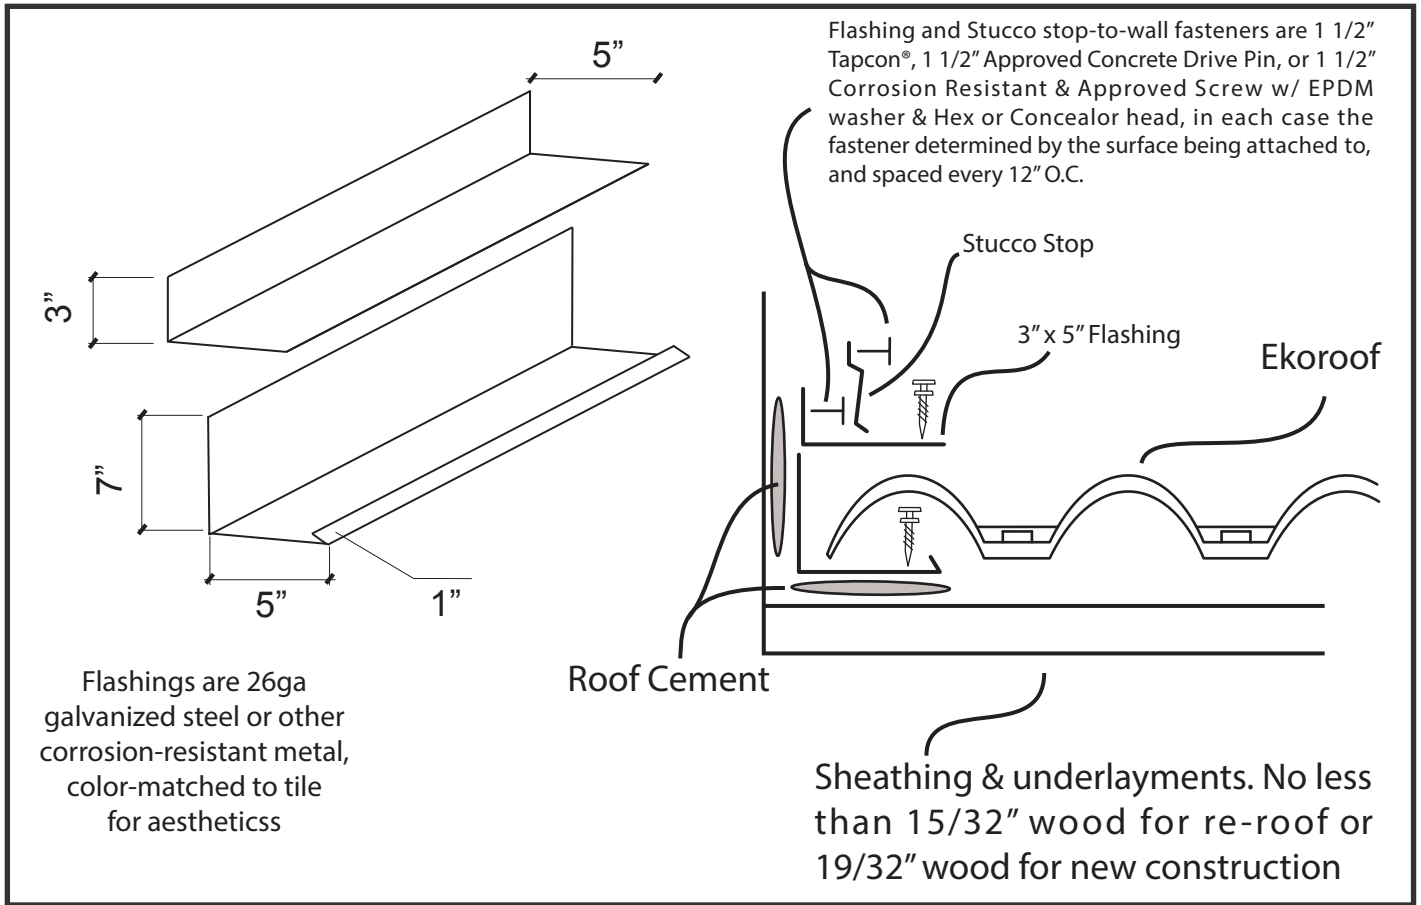


Sidewall to Deck Fastener is #10, 1 1/2" wood point, Corrosion Resistant & Approved Screw w/ EPDM washer & Hex or Concealor head, installed every 12" O.C. Sidewall to Ekorooftile fastener is same type, but color-matched for aesthetics.


 
Concealor / Pancake Head



1/4" Hex Drive

 


Install Sidewall Flashing to the wall as specified, then fasten Ekorooftile LiteTile panels abutting the inner part of the flashing. Ekorooftile tiles may be cut to fit flush against the back end of the flashing. Fasten flashing to high point of Ekorooftile tiles every 20".

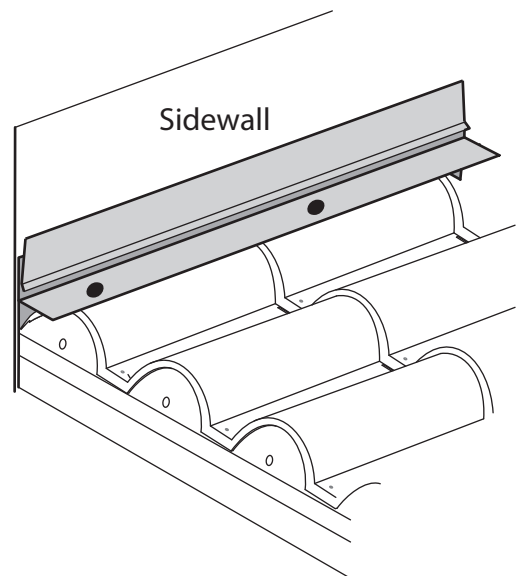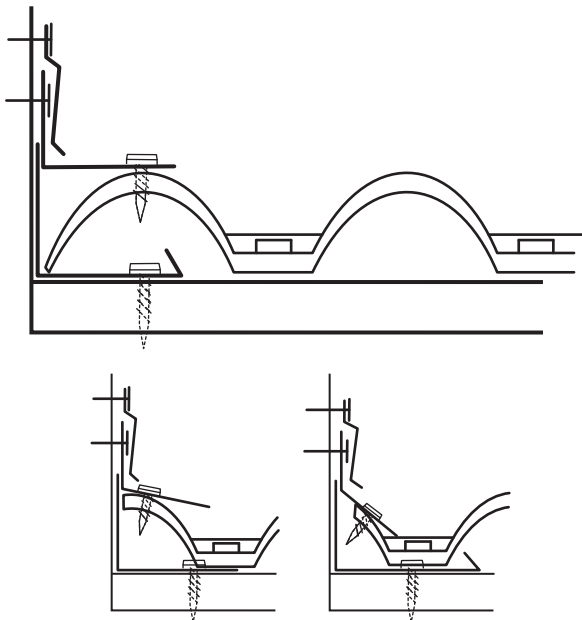

drawings not to scale


Ekorooftile Sidewall to Headwall Flashing Installation Detail

This condition is encountered at dormers, chimneys, and other locations where a sidewall turns a corner into a headwall.

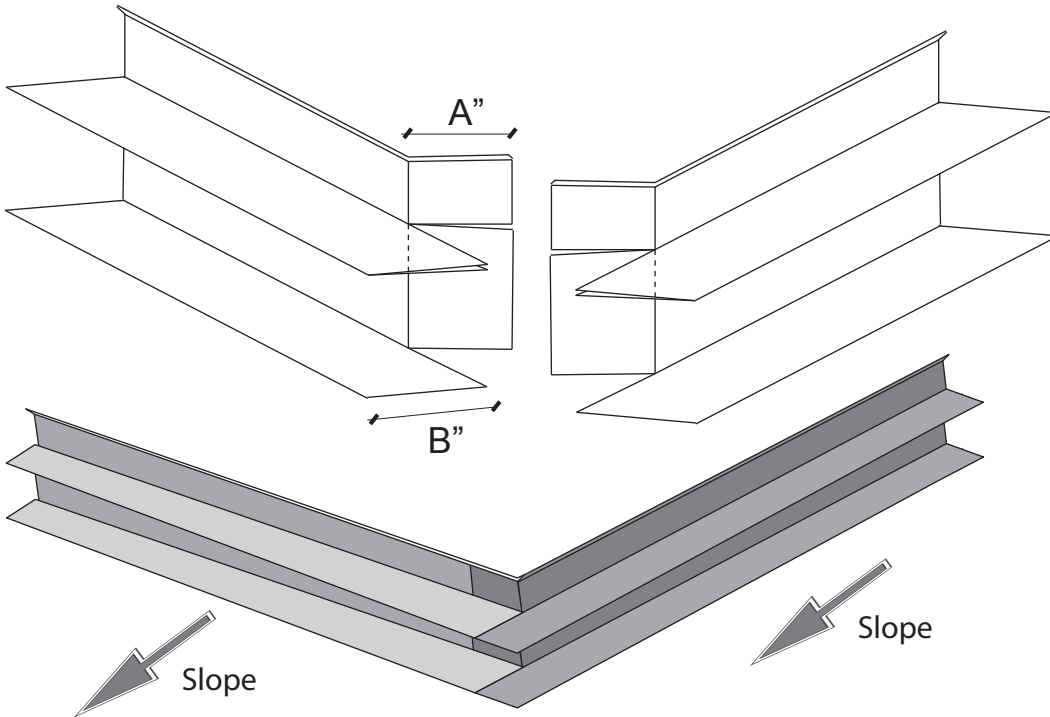

Cut Flashings as shown. Length of flashing to be cut and overlapped is equivalent to length of horizontal sections ($A'' = B''$ in illustration)

Overlap flashings in shingle or step flashing manner around the corner. Seal all seams with Ekorooft Sealant, NPC Sealants Solar Seal 900®, or equivalent.

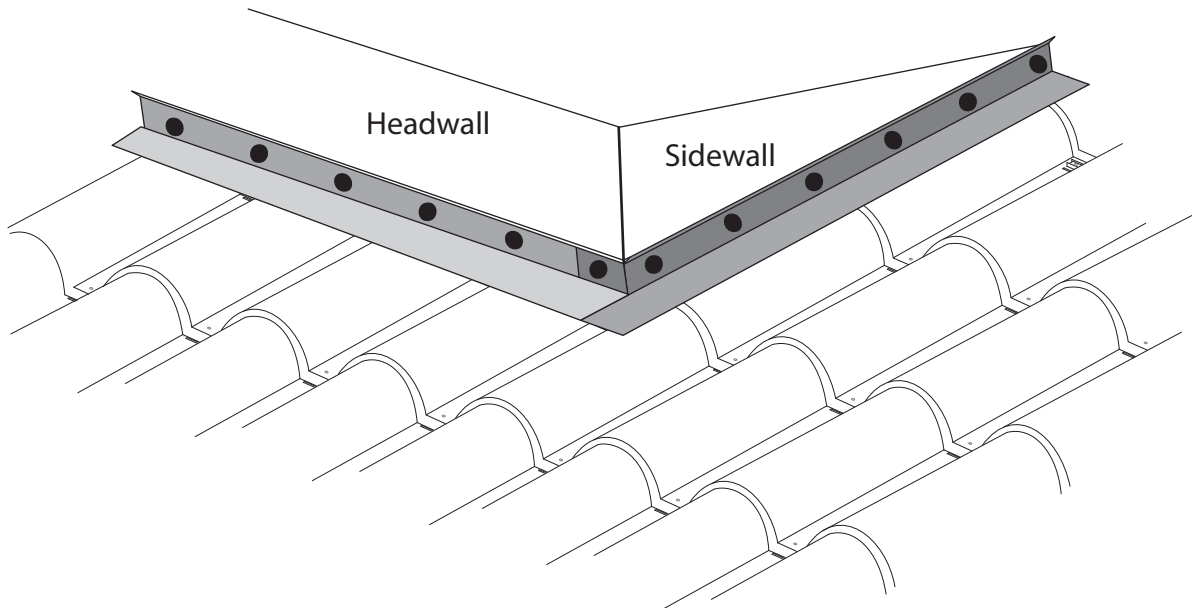

See pages 24-27 on headwalls and sidewalls for fastener types to be used, locations and spacing.

drawings not to scale