


## **Ekoroof Tile Eave Closure Installation Detail**

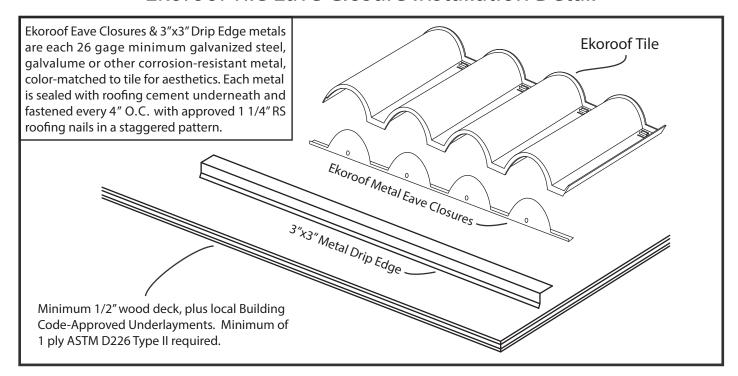

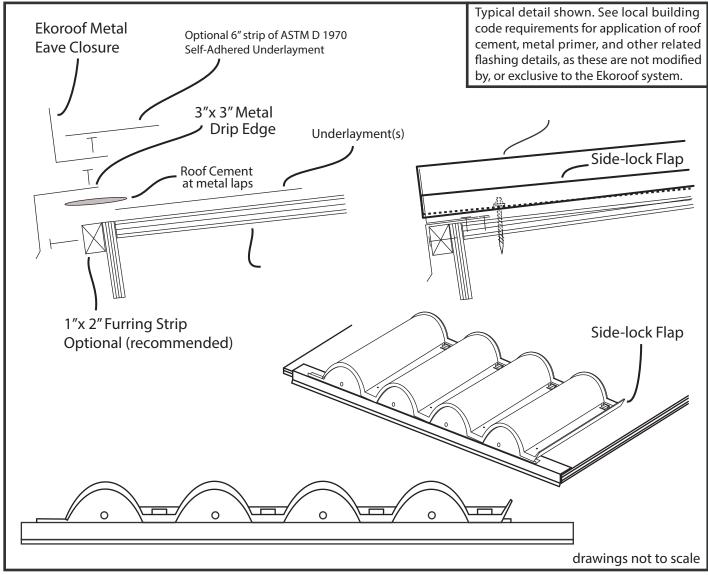

## Ekoroof Tile Eave Closure Installation Detail - Pop Rivet Method

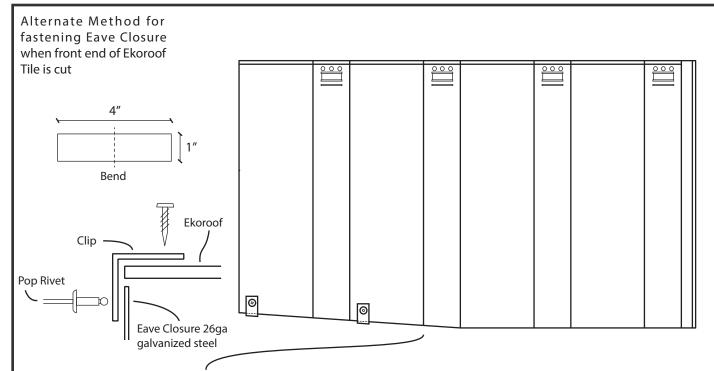

You may at times need to cut the front end of the Ekoroof Tile for conditions. Doing so will cause the loss of the front lip that holds in the metal eave closure. Conditions that would necessitate this modification include, but are not limited to, an angled eave, roof end, or angled transition to a flat roof or cricket, sometimes occurring at a valley, where the eave closure can additionally not be fastened to the deck. When there is no lip to hold the eave closure in place, a 90° 4″ x 1″ wide clip of 26ga galvanized steel can be cut and pop riveted to the eave closure, and fastened to the Ekoroof panel with a 1″ Ekoroof Fastener. The clip/rivet should be used on each high point of the tile that is missing a lip, and should be installed at a 45° angle from the weep hole in the eave closure, color matched for aesthetics.

